

# IP Paging Zone Controller with InformaCast®

## Installer's Guide



# **Getting Started**

This step-by-step guide will help you install your Wahsega IP Paging Zone Controller with InformaCast.



## What's in the Box





- (1) IP Paging Zone Controller
- (1) 2-Pin male connector
- (1) 6-Pin male connector
- (1) 8-Pin male connector
- (1) Ferrite cable clamp



## What You Will Need

- PoE power
  - Power-over-Ethernet (PoE 802.3af) switch
- Remote communication point
  - InformaCast Server
- Network cable (Cat 5e or Cat 6)
- Audio cable(s) with RCA mono male connector



## Wiring

#### **Power**


**Option A:** To use Power-over-Ethernet (POE 802.3af), route a Cat 5e or Cat 6 Ethernet cable from a PoE switch or injector to the LAN port.

**Option B:** Alternately, use the included 2-pin male connector to connect +9-16VDC and Ground wires for power. Use standard (unpowered) Ethernet for data.

**NOTE:** Use either POE or 9-16V for power. DO NOT USE BOTH.

#### **Status**

The status LED will increase in brightness as the zone controller is powering up and will remain steadily lit when the unit is successfully powered.

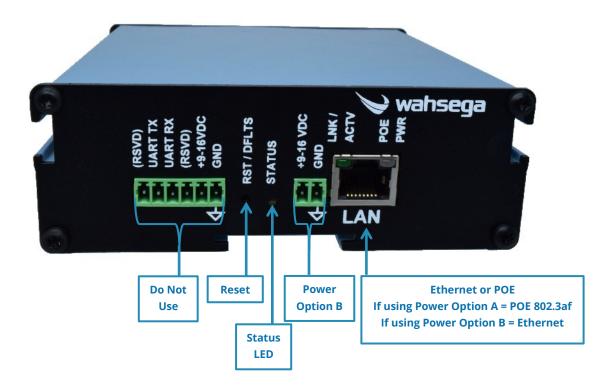



### **Audio Outputs**

**LINE OUT (unbalanced)** – Connect to amplifier via RCA mono connector. Configure audio settings in configuration webpages as described in User's Guide.

**RELAY** (Single Channel Zone Controller only) – The relay connector is a 3-pin male connector (included), wired to a Form C relay (SPDT) with contacts rated for 30VDC or 270VAC at 3A.

- Pin 1 is a Normally Closed (NC) dry contact closure.
- Pin 2 is Common.
- Pin 3 is a Normally Open (NO) dry contact closure.


**STAT –** LED will illuminate when audio is being passed. The steadier the STAT LED, the stronger the audio signal present.






## **Dimensions**

**Front** 

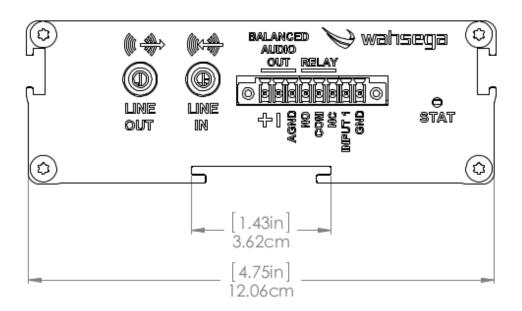


### Rear

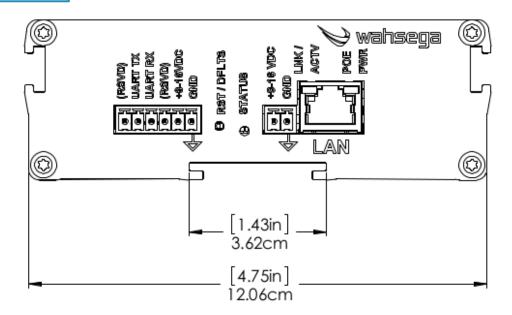



Side

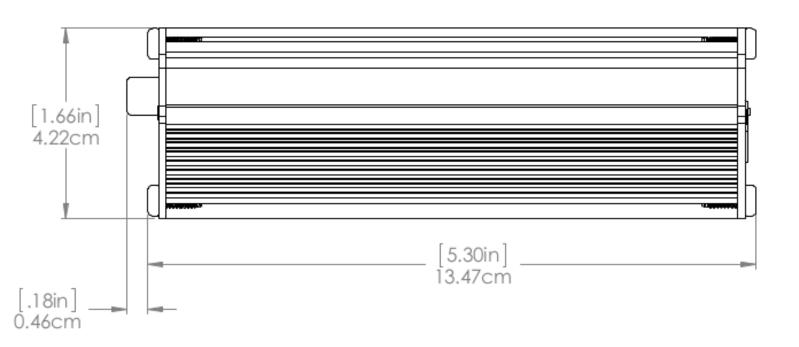



# **Standards Compliant**

This product is designed and manufactured in the USA.

- ROHS compliant
- Temperature rating -40C to +60C.







# Wahsega IP Paging Zone Controller With InformaCast

WL-ZN-CTR-1CH-INF-R
WL-ZN-CTR-2CH-INF

Installation Guide